


1


PRODUCT OVERVIEW

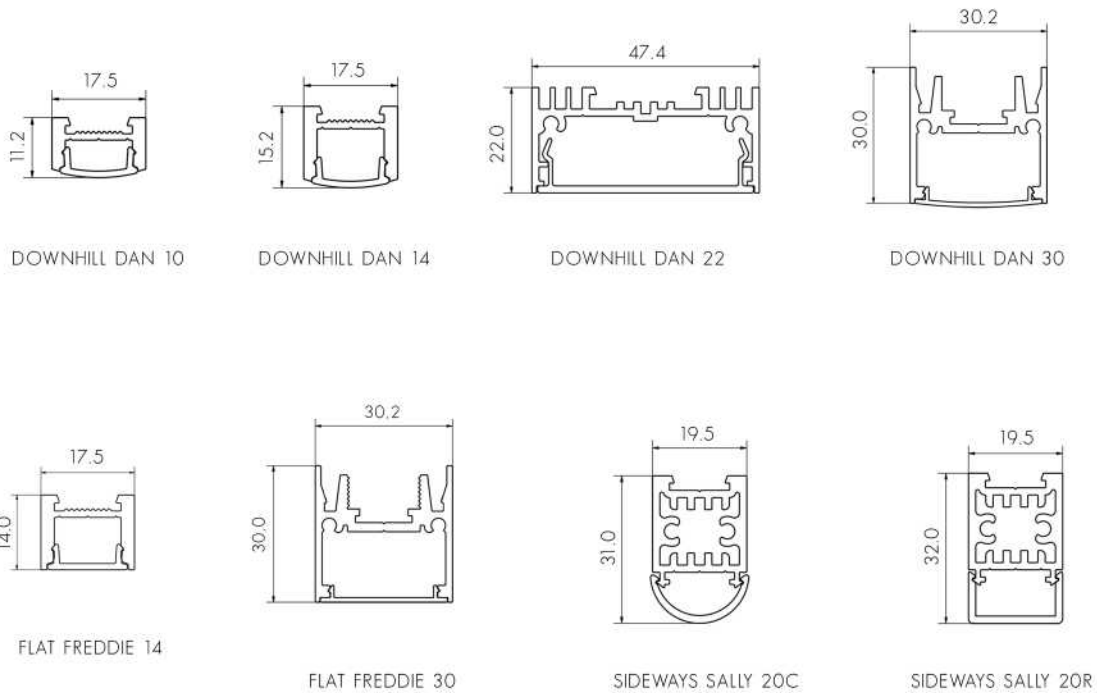

2

DRILL HOLES FOR SUSPENSION CEILING ATTACHMENTS AND INSTALL

NOTE: MOUNTING HOLES MUST BE DRILLED WITHIN 200MM OF EACH END OF THE EXTRUSION AND WITHIN 200MM EITHER SIDE OF A JOIN OR BEND. E.G. A 2500MM EXTRUSION SHOULD HAVE 3 MOUNTING POINTS, ONE CENTRED AND ONE EACH END WITHIN 200MM.

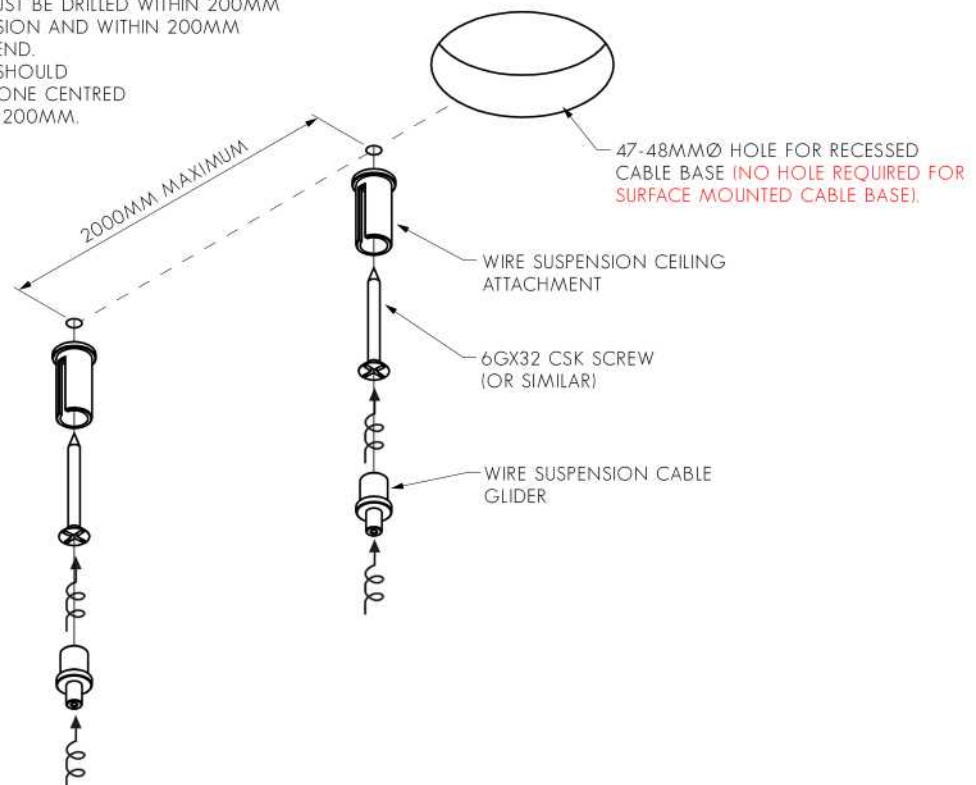

3

INSTALL SUSPENSION CABLES, HANG EXTRUSION, JOIN EXTRUSIONS

1. FEED WIRE SUSPENSION CABLES THROUGH MOUNTING CLIPS (AS SHOWN), THEN SLIDE SUSPENSION BRACKETS IN TO EXTRUSION. (SEE FIG. 1).
2. FEED WIRE SUSPENSION CABLES IN TO CEILING ATTACHMENTS. PRESS NIPPLE INWARDS TO ADJUST CABLE LENGTH (SEE FIG. 2).
3. IF USING MULTIPLE LENGTHS OF EXTRUSION, SLIDE EXTRUSIONS TOGETHER ON TO JOINER OR BEND PLATE (SEE FIG. 3).
4. ONCE CORRECT SUSPENSION HEIGHT HAS BEEN SET, CUT OFF EXCESS SUSPENSION WIRE USING SIDE CUTTERS. (SEE FIG. 2).

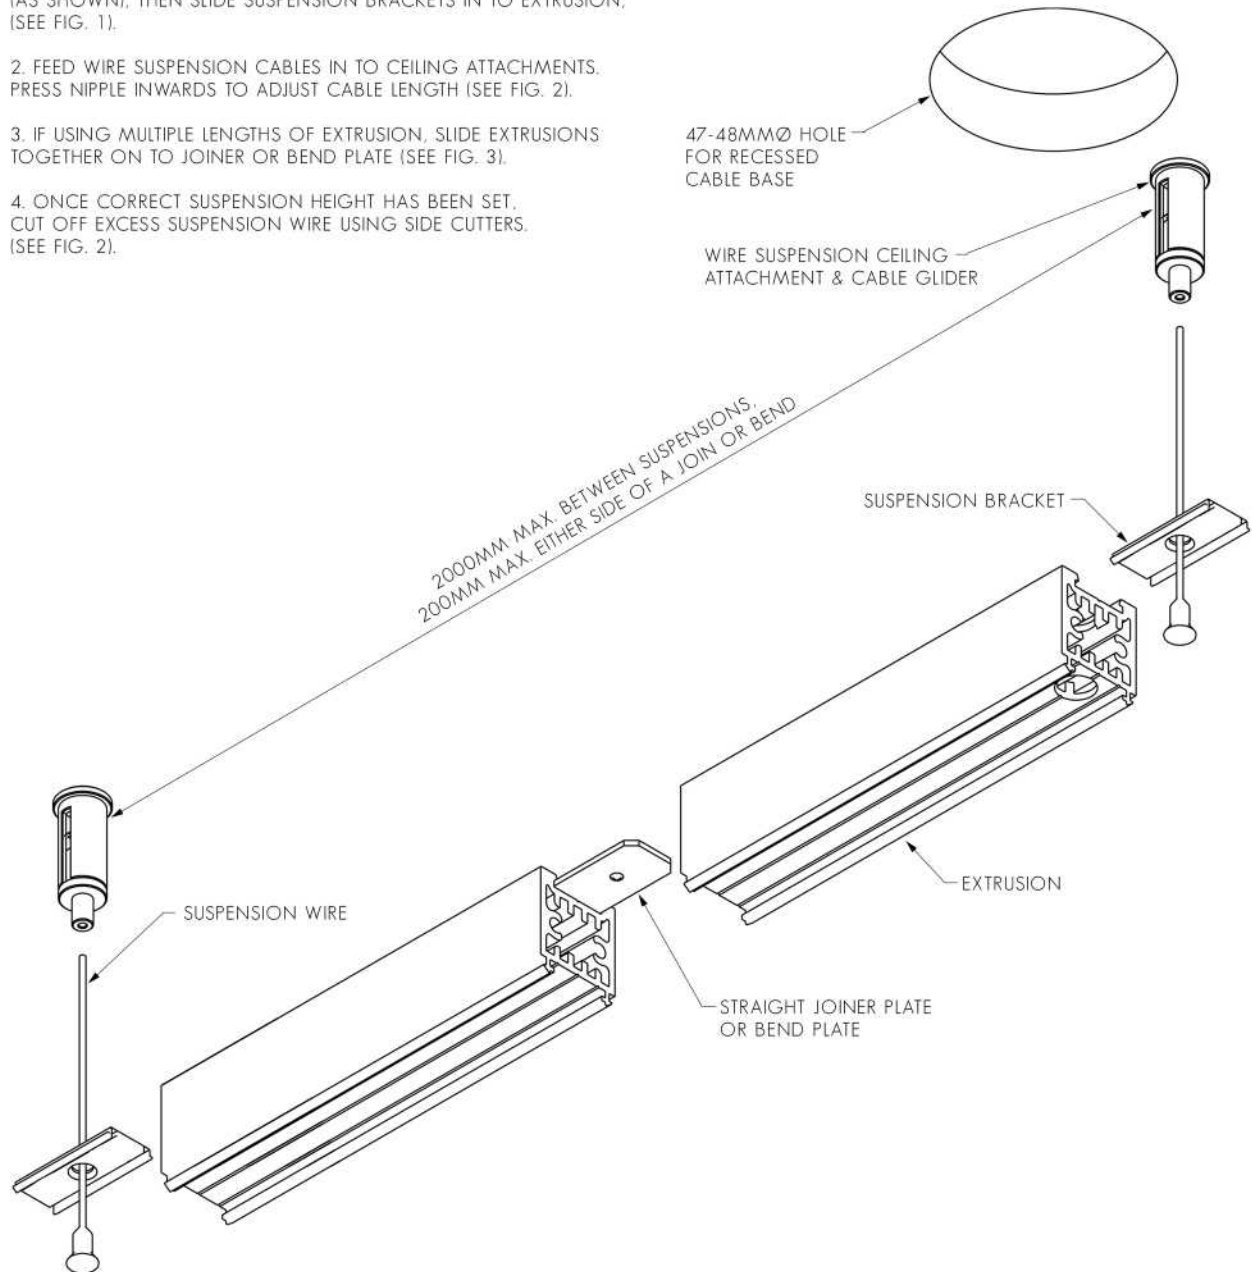


FIG. 1 - ENSURE EXTRUSION IS MOUNTED SECURELY

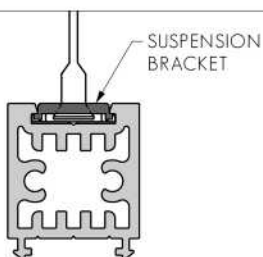


FIG. 2 - ADJUST SUSPENSION CABLE


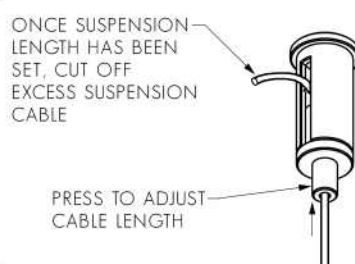


FIG. 3 - TIGHTEN SCREWS IN JOINER/BEND PLATES

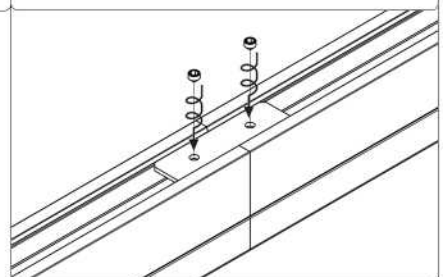

4

MAKE ELECTRICAL CONNECTION, INSTALL CABLE BASE, CLEAN EXTRUSION, INSTALL LED STRIP, DIFFUSER AND END CAPS

1. FEED LED STRIP TAILS (OR CABLE) THROUGH HOLE IN EXTRUSION AND CLAMP USING CORD GRIP SUPPLIED. (SEE FIG. 4). DO NOT INSTALL LED STRIP AT THIS POINT. 2. MAKE ELECTRICAL CONNECTION; CONNECT LED STRIP TAILS TO LED DRIVER USING CRIMP CONNECTORS, THEN SEAL WITH HEAT SHRINK.

3. PUSH CABLE BASE INTO HOLE IN CEILING - SEE FIG. 5 OR FIG. 6 FOR SURFACE MOUNTED CABLE BASE.

4. **IMPORTANT:** BEFORE MOUNTING LED STRIP, CLEAN EXTRUSION USING AN ALCOHOL BASED CLEANER.

5. REMOVE BACKING FROM LED STRIP TO EXPOSE STICKY SURFACE. LAY LED STRIP INTO EXTRUSION, USING THE SMALL GROOVES IN THE BACK OF THE EXTRUSION AS A GUIDE.

6. CLIP DIFFUSER INTO EXTRUSION, ENSURING A FIRM CONNECTION (SEE FIG. 7). FOR SIDEWAYS SALLY 20, BE SURE NOT TO PUSH DIFFUSER IN TOO FAR. THERE SHOULD BE A SMALL GAP BETWEEN THE OUTSIDE FACE OF THE EXTRUSION AND THE DIFFUSER.

7. PUSH END CAPS INTO ENDS OF EXTRUSION.

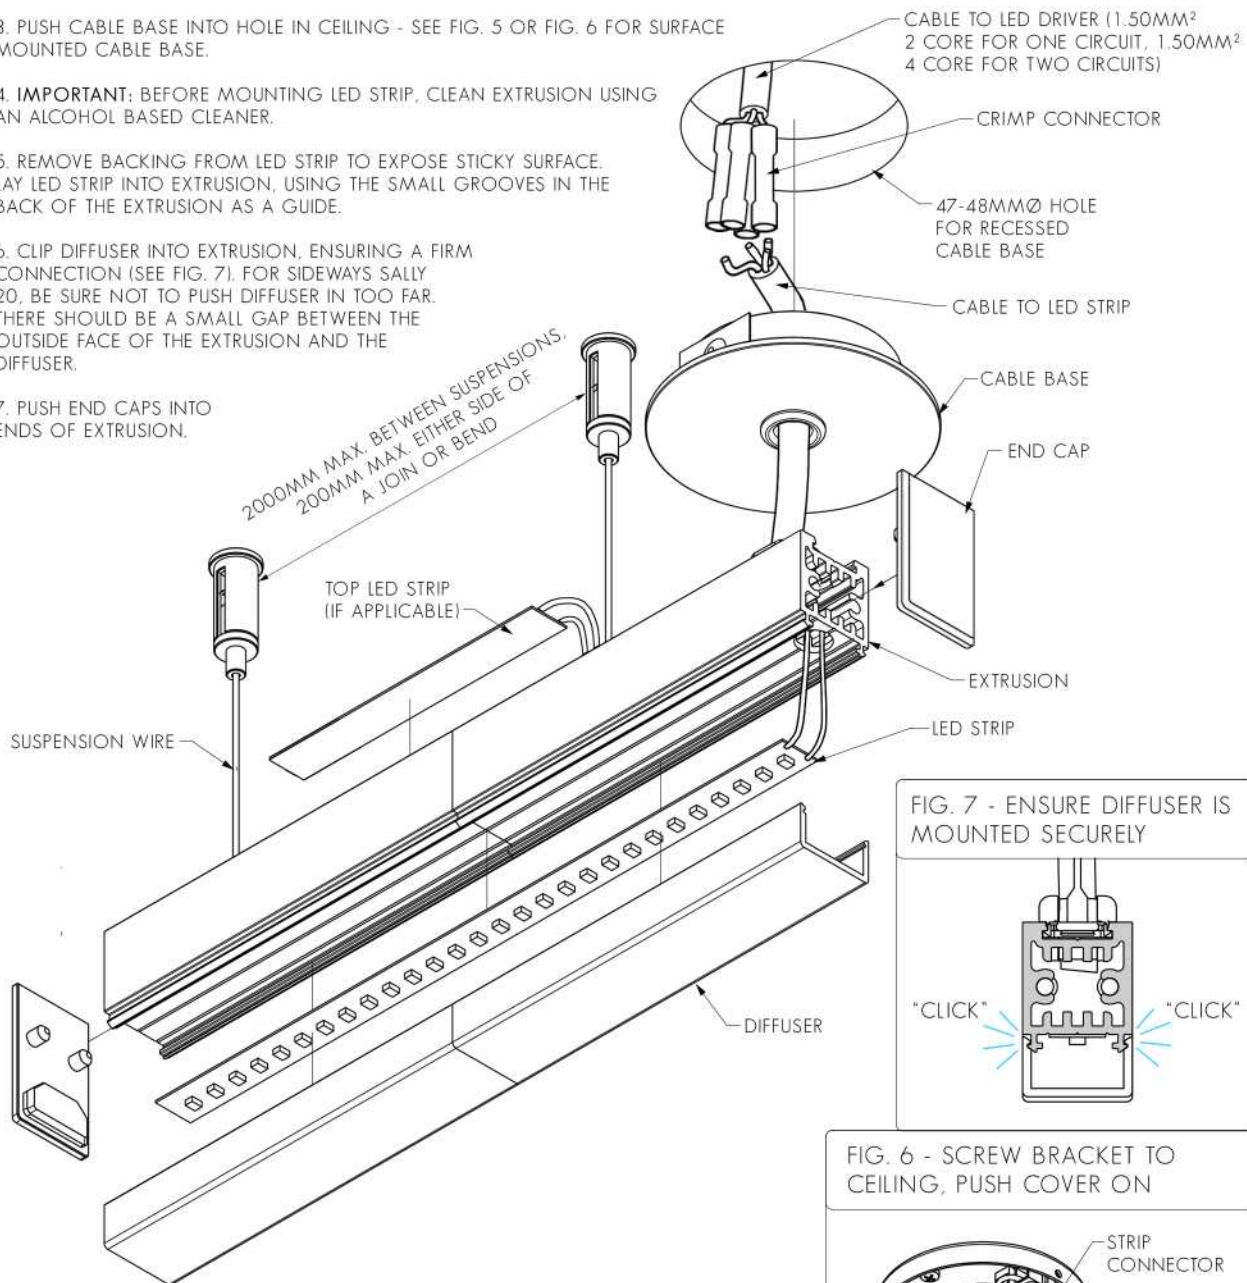


FIG. 7 - ENSURE DIFFUSER IS MOUNTED SECURELY

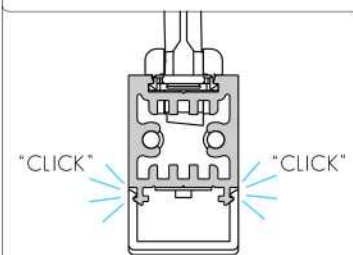


FIG. 6 - SCREW BRACKET TO CEILING, PUSH COVER ON

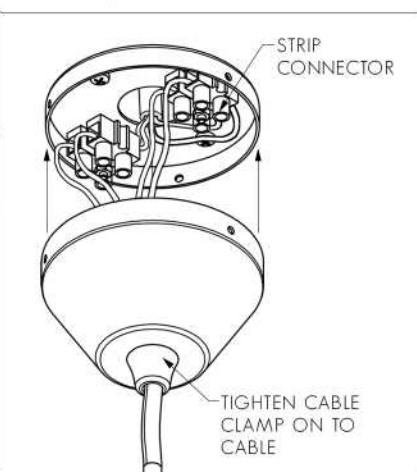


FIG. 4 - FASTEN CABLE USING CORD GRIP

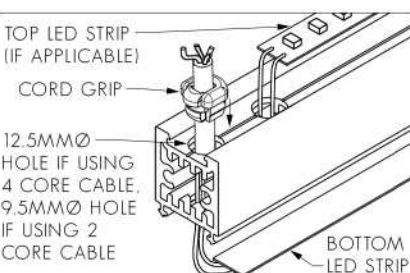


FIG. 5 - INSERT CABLE BASE IN TO CEILING

